

Installation Instructions

安裝說明書

FRONT LOWER BRACE

前下結構桿

#Q0224


Application 適用車型

Volvo XC60 '18-present

Volvo XC90 '15-present

Components 內含配件

- | | |
|---------------------------|------|
| ① Brace 結構桿桿身 | 1PCS |
| ② Bolt 螺絲 (M14x2.0x100) | 2PCS |
| ③ Washer 華司 (40x14.5x2.0) | 2PCS |

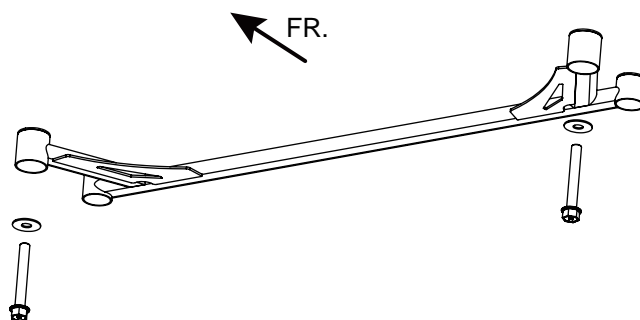

Caution 注意事項


- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the bolts from the front sub-frame on both sides.

(See arrows in figure 1)

拆卸前副車架兩側的螺絲。(請參考圖表一箭頭)

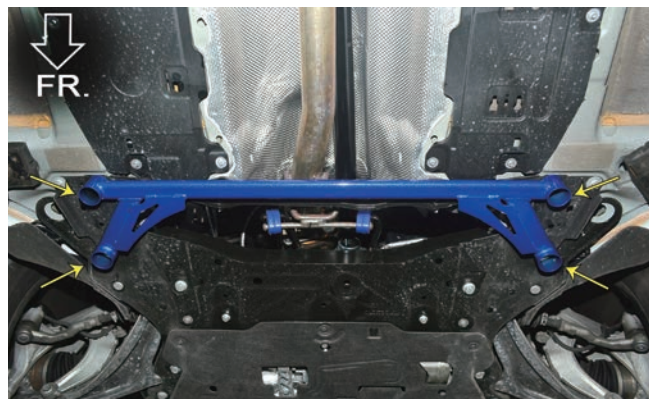

2. Position ①Brace to the vehicle. (See figure 1)

將 ①結構桿桿身 組裝於車輛。(請參考圖表一)

3. Once in place, install supplied ②bolts & ③washers to the front mounting holes, then reinstall the removed factory bolts to the rear to secure the brace. (See figure 2)

使用配件 ②螺絲 及 ③華司 安裝於前端鎖孔，並沿用已拆下的原廠螺絲安裝後端鎖孔以固定桿身。

(請參考圖表二)

