


## Application 適用車型

Lexus NX (Z10 '15-Present)  
Toyota RAV4 (XA40 '13-Present)

## Components 內含配件

① Strut brace 引擎室拉桿總成	1PC
Bolt 螺絲 ( M10x1.5x80 )	2PCS
Nut 螺帽 ( M10x1.5-17x10 )	2PCS
Washer 華司 ( 20.8x10.7x2 )	4PCS

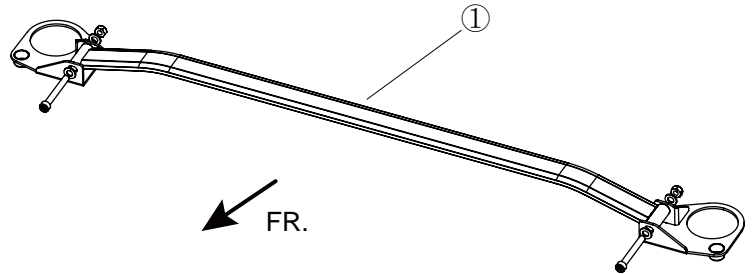

## Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

## Instructions 安裝說明

1. With the vehicle on a level surface, remove the nuts of strut mounts on both sides.  
將車輛停放在平地上，接著拆卸兩側避震器上座之螺帽。
2. Position ① Strut brace over the studs of strut tower.  
將 ①引擎室拉桿 放置於避震器上座。
3. Tighten the nuts back to the studs of strut mounts.  
將上座螺帽鎖回避震器上座的螺柱。

Illustration of installed state  
完成示意圖

