

Installation Instructions

安裝說明書

FRONT LOWER ARM SKID PLATE

前下三角架護板


#Q0644

Application 適用車型

TOYOTA HILUX 8th AN120/130 2015-present
TOYOTA FORTUNER 2016-present

Components 內含配件

- ① Arm Skid Plate 三腳架護板(R/L).....2pcs
- ② Bolt 螺絲(M8x1.25x62).....2pcs
- ③ Bolt 螺絲(M8x1.25x30).....6pcs
- ④ Bolt 螺帽(M8x1.25).....4pcs
- ⑤ Washer 華司(26x10.5x2).....2pcs

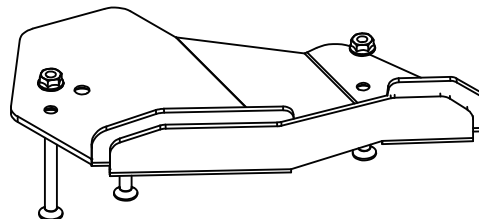

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Install M8x1.25x30 Bolt to the arrowed part.
在紅色箭頭處使用M8x1.25x30 的螺絲鎖緊。



2. Make sure to remove the cover and tighten the M8x1.25x63 nuts from the top.
移除紅圈處的蓋子 確認M8x1.25x63與螺帽鎖緊。



3. Install the M8x1.25x65 bolts to the arrowed part. Then tighten the bolts using the nuts and washers from the top.
使用M8x1.25x65螺絲固定三角架並確保螺絲穿過三角架孔並使用螺帽和華司鎖緊。

